HOME
DECORATORS
C O L L E C T I O N

HDC# 11402 MFG# TW-18719BK/TW-18719WE
MODERNA WALL MIRROR 41"Hx27"W

ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.

Made In China

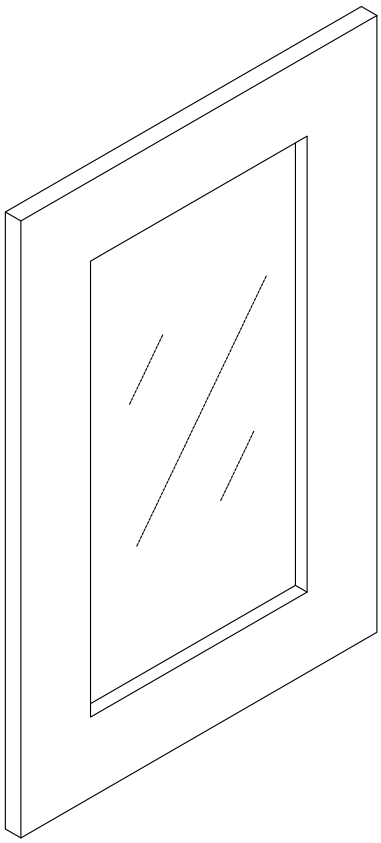

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTIONS LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

ASSEMBLY TOOLS REQUIRED

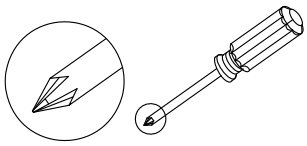

"+"Screw driver

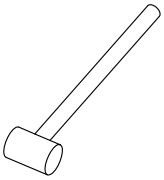

Rubber Mallet

Electric drill

PARTS LIST

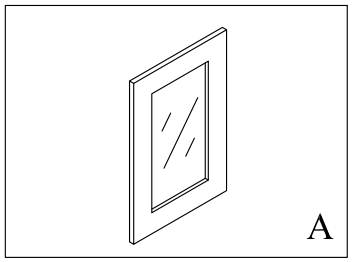

HARDWARE LIST

GECKO
FLAT HEAD SCREW
2 SETS



(1)

USE ELECTRIC DRILL TO DRILL 2 SMALL HOLES ON THE DESIRED LOCATION OF THE WALL. INSERT THE 2 GECKOS INTO THE HOLES BY RUBBER MALLET. INSERT 2 FLAT HEAD SCREWS INTO 2 GECKOS AND THEN HANG UP THE MIRROR ON THE WALL AS SHOWN.